



Htek IP Phones Registration Guide

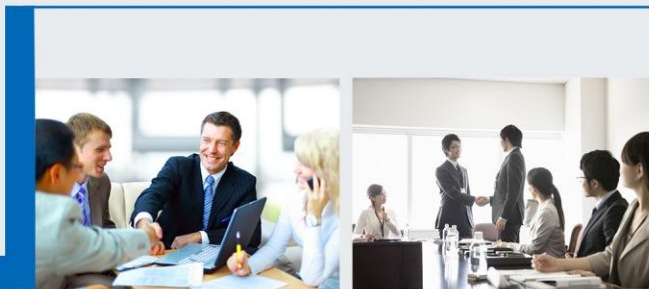

Note1

Following must be filled during the registration.

1. Account Active: Yes
2. Primary SIP Server
3. SIP User ID
4. Authenticate ID
5. Authenticate Password

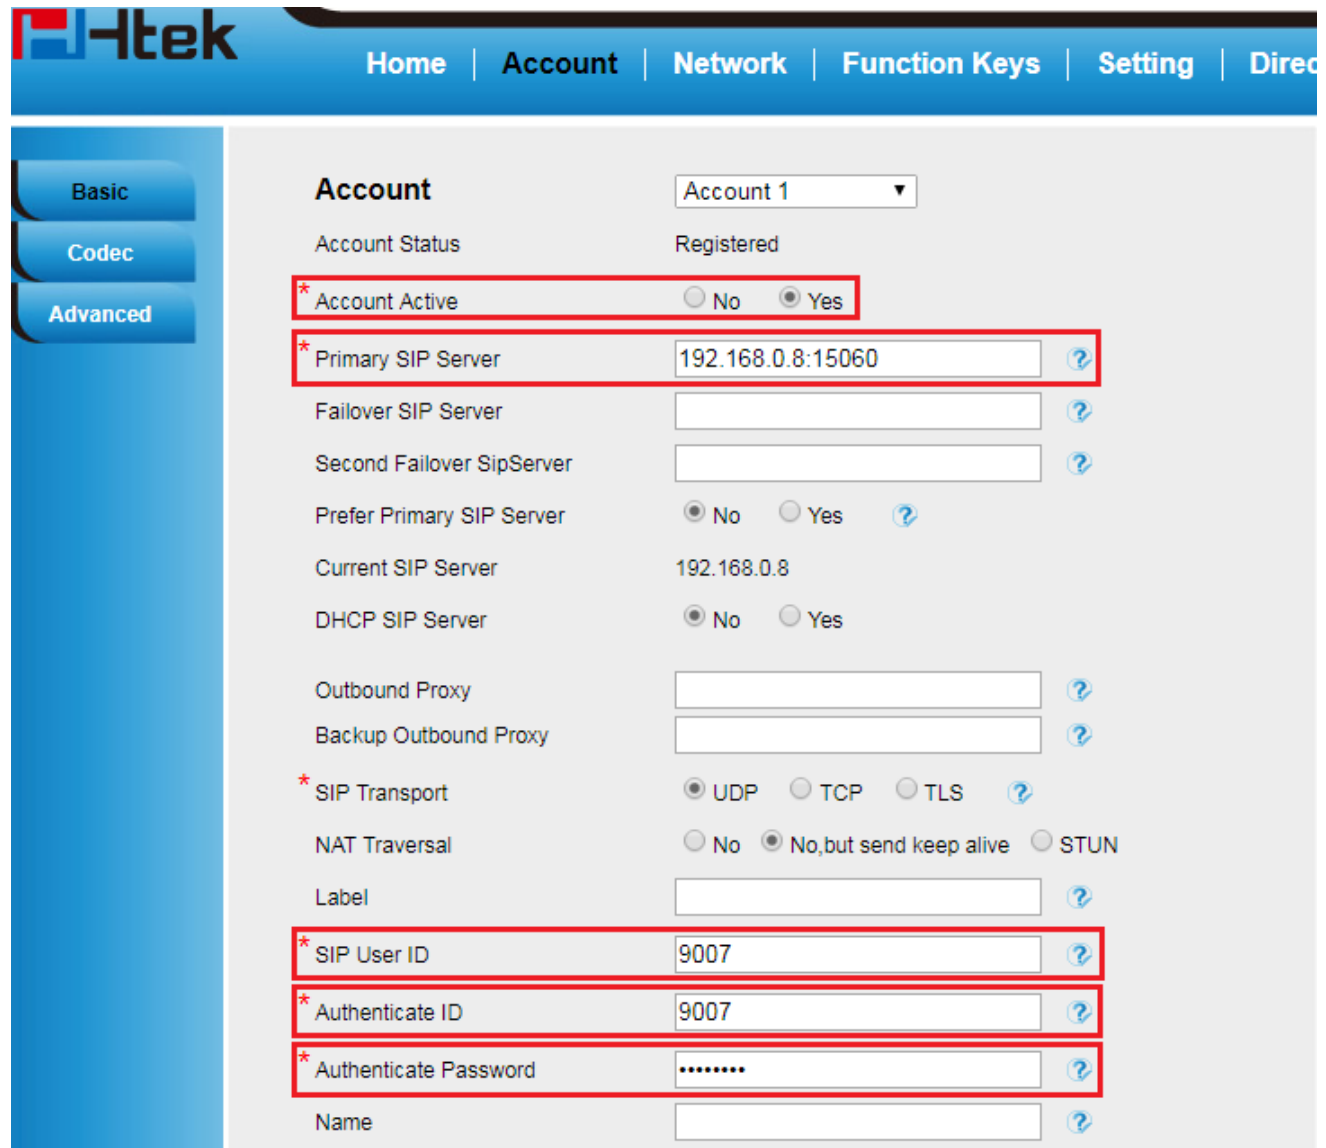

Account Account 1

Account Status Registered

* Account Active No Yes

* Primary SIP Server 192.168.0.8:15060 ?

Failover SIP Server ?

Second Failover SipServer ?

Prefer Primary SIP Server No Yes ?

Current SIP Server 192.168.0.8

DHCP SIP Server No Yes

Outbound Proxy ?

Backup Outbound Proxy ?

* SIP Transport UDP TCP TLS ?

NAT Traversal No No, but send keep alive STUN

Label ?

* SIP User ID 9007 ?

* Authenticate ID 9007 ?

* Authenticate Password ?

Name ?

Note2: Restart

When you change the information marked with * of registered account, you should click "Restart" and wait for a few minutes for registering successfully.

Note3: SIP Port

When you register the accounts in web and the server port is not “5060”, then “SIP Server” should be set as “SIP Server’s address:SIP port”, for example:

Server: 192.168.0.8

SIP port: 15060

Then fill the sip server: 192.168.0.8:15060

A screenshot of a web interface showing account configuration. At the top, 'Account Status' is 'Registered'. Below it, 'Account Active' has radio buttons for 'No' and 'Yes', with 'Yes' selected. A red box highlights the 'Primary SIP Server' field, which contains the text '192.168.0.8:15060' and a help icon.

Note4: Accounts

As the default setting of Line Key of Htek IP Phone is “Auto”, when register only one account, the others will not display any account and when register more than one account, the others will display the accounts in order, so change the “Account” (Function Keys ->Line Key) into “Account1/2/3/4” respectively if you need.

A screenshot of the Htek web interface. The top navigation bar includes 'Home', 'Account', 'Network', 'Function Keys', 'Setting', 'Directory', and 'Management'. On the left, a sidebar has 'Line Key', 'Programmable Key', and 'EXP KEY' buttons. The main area shows configuration options: 'Line Label Length' (Default), 'Line Page Indicator' (Disable), 'BLF list MODE' (Manually), and 'line key as cancel' (Disable). Below these is a table with columns: Line, Type, Mode, Value, Label, Account, and Extension. The 'Account' column for Key1, Key2, Key3, and Key4 is highlighted with a red box, showing 'Auto' for each. A 'NOTE' box is visible on the right.

Line	Type	Mode	Value	Label	Account	Extension
Key1	Line	Default			Auto	
Key2	Line	Default			Auto	
Key3	Line	Default			Auto	
Key4	Line	Default			Auto	

Note5: Password

When enter the password, be careful of the capital and small letters that provided by administrator.